




ANUFIX 1 ASSEMBLY GUIDE

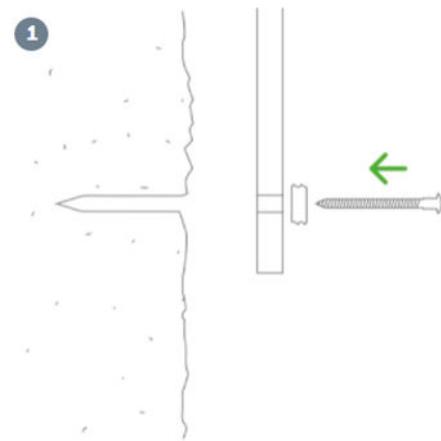

1
Hold the threaded ring in front of the hole drilled in the shield and insert the screw

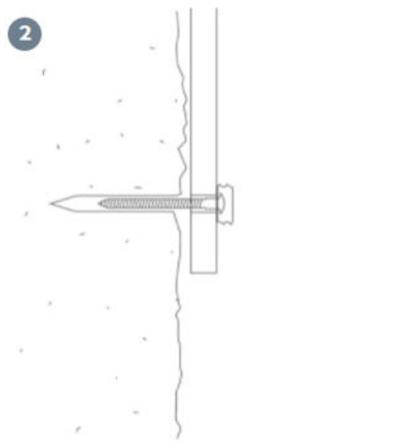

2
Tighten the screw - the panel is now firmly fixed in the wall

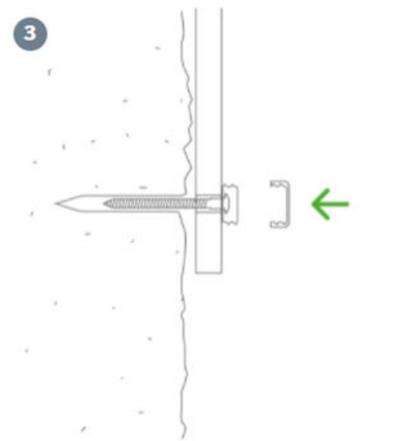

3
Screw the head piece onto the threaded ring (left-hand thread)

